

7 CUFT FARM/YARD CART



Instruction & Assembly

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Table of Contents

General Warnings and Rules	3
Hazard Signal Word Definitions.....	4
Controls and Features Identification.....	5
Component & Hardware.....	6
Assembly Instruction	7, 8, 9 10, 11
Maintenance and Storage	12
Specification.....	13
Parts Drawing & Parts List	14, 15
Limited Warranty	16

GENERAL WARNINGS

READ and UNDERSTAND this manual completely before using yard cart.

Operator must read and understand all safety and warning information, operating instructions, maintenance and storage instructions before operating this equipment. Failure to properly operate and maintain the yard cart could result in serious injury to the operator or bystanders.

Operation Warnings

- Do not at any time carry passengers sit or stand on the cart.
- Do not allow children to play on, stand upon or climb in the cart.
- Always inspect the cart before using to assure the cart is in good working condition.
- Replace or repair damaged or worn parts immediately.
- Always check and tighten hardware and assembled parts before operation.
- Do not exceed equipment maximum load capacity of 300lbs.
- Avoid large holes and ditches when transporting loads.
- Be careful when operating on steep grades (hill) the cart may tip over.
- Always use caution when loading and unloading cart to avoid tipping.
- Never tow the cart with a motorized vehicle.

Crush and Cut Hazards

- Always keep hands and feet clear from moving parts while operating the equipment.
- Always clear and keep work area clean.
- Always wear safety gear, eye protection, gloves and work boots when loading and unloading material from the cart.

WARNING

The warnings, cautions, and instructions outlined in this instruction manual cannot cover all possible conditions or situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product and must be supplied by the operator.






PROP 65 WARNING

This product can expose you to chemicals including lead and di (2-ethylhexyl) phthalate (DEHP), which are known to the state of California to cause cancer and birth defects or other reproductive harm, and Diisononyl Phthalate (DINP), which are known to the State of California to cause cancer. For more information go to www.p65warnings.ca.gov.

Assembly Is Required

This product requires assembly before use. See "Assembly" section for instructions. Because of the weight and size of the yard cart, it is recommended that another adult be present to assist with the assembly. **INSPECT ALL COMPONENTS** closely upon receipt to make sure no components are missing or damaged. Do not fully tighten all hardware until the yard cart is fully assembled.

Hazard Signal Word Definitions

	<p>This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.</p>
	<p>DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.</p>
	<p>WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.</p>
	<p>CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.</p>
	<p>CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.</p>


ABOUT YOUR YARD CART

This yard cart is designed to haul light yard and garden materials and equipment. It is ideal for clippings, potting soil, fertilizer, and garden tools. Never exceed the rated load capacity of 300lbs when operating the cart.

Technical specifications on the yard cart are provided in the “Specifications” section of this manual.

Controls and Features Identification

Read this owner's manual before operating the equipment. Familiarize yourself with the location and function of the controls and features. Save this manual for future reference.

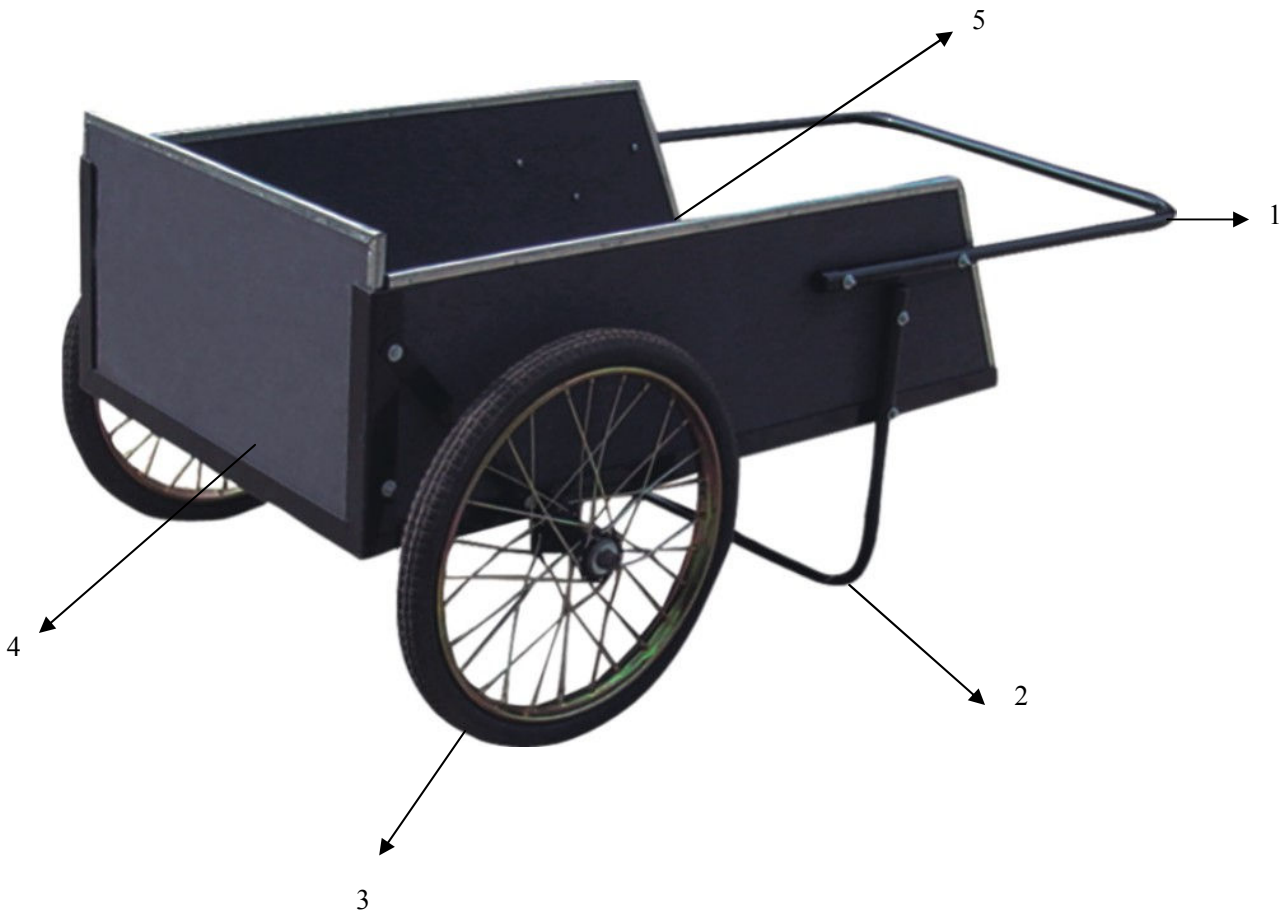

- 1) **Handle** – Lift and move cart easily.
- 2) **Support Leg** – Stabilizes load and cart.
- 3) **Wheel** – Do not exceed recommended rated 15-20 PSI.
- 4) **Removable Front Panel** – Used for Dumping Load
- 5) **Cart Box** – Do not exceed rated load capacity 300lb.



CAUTION

Read and follow all instructions for assembly and operation. Failure to properly assemble this equipment could result in serious injury to the user or bystanders, or cause equipment damage.


Yard Cart Component Parts and Assemble.

Take all parts out of the shipping crate and inspect components to ensure there are no missing pieces before starting to assemble the yard cart follow steps 1 through 22.


TOOLS REQUIRED

- Screw Driver
- Pliers
- 10mm Wrench

Component Parts

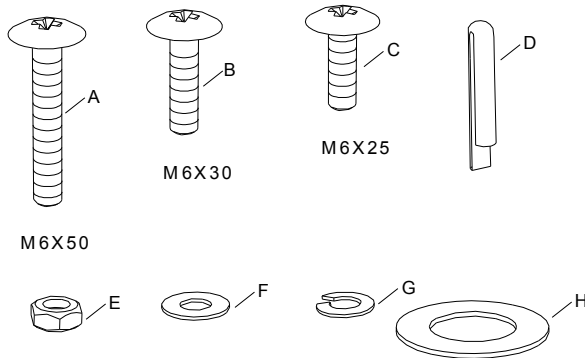

REF.	QTY.	DESCRIPTION
A	8	Screws, M6x50
B	4	Screws, M6x30
C	15	Screws, M6x25
D	4	Cotter Pins
E	27	Hex Nuts, M6
F	27	Big Flat Washer, Ø6
G	4	Lock Washer, Ø6
H	4	Flat Washer Ø20

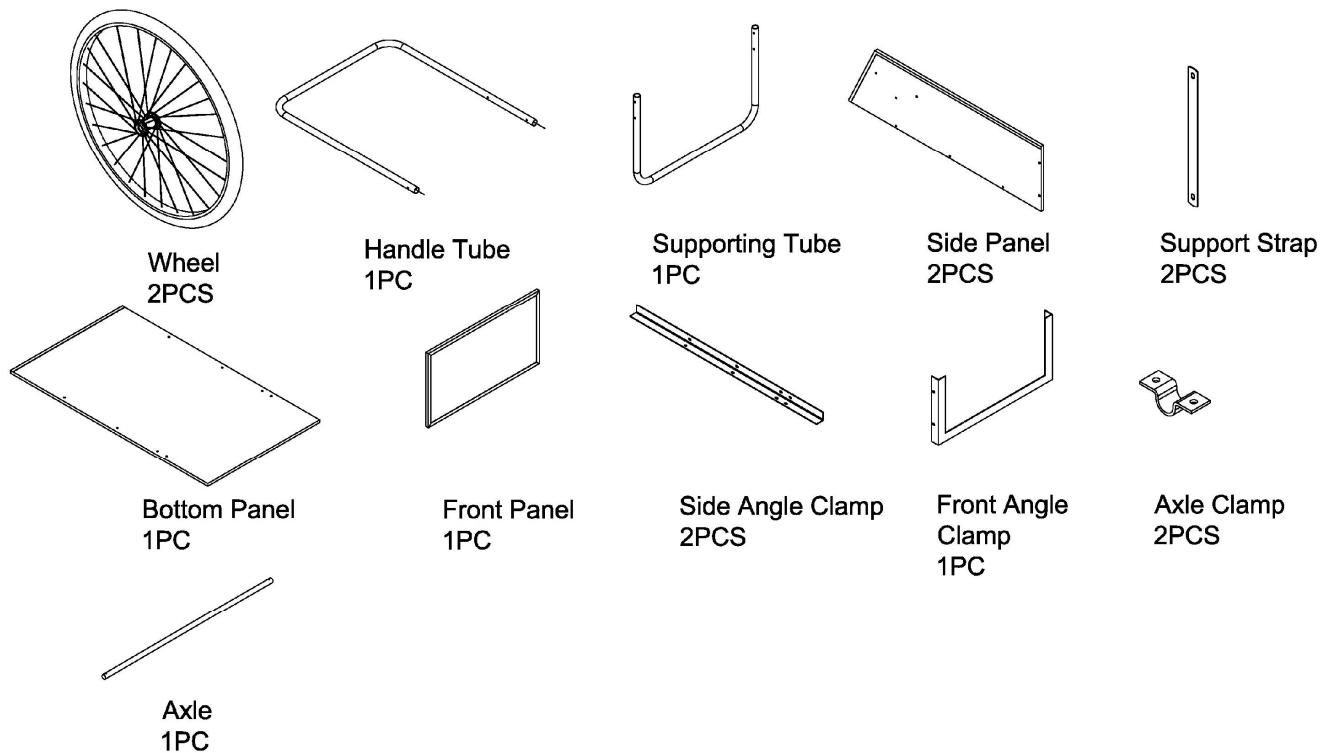


Assembly Instruction

When assembling your cart, place the heads of all screws with flat washers to the inside and hex nuts to the outside.


1. Lay the front angle assembly down (flat) on floor and stand the bottom panel in position as shown in FIGURE 1.

Note: The bottom panel has a galvanized edge and the front of the box has three holes shown in FIGURE 1.

2. Line up the three holes in bottom panel with holes in front of the angle assembly. Push three M6X25 screws with big flat washers through the bottom panel and angle piece. Secure with hex nuts and tighten.

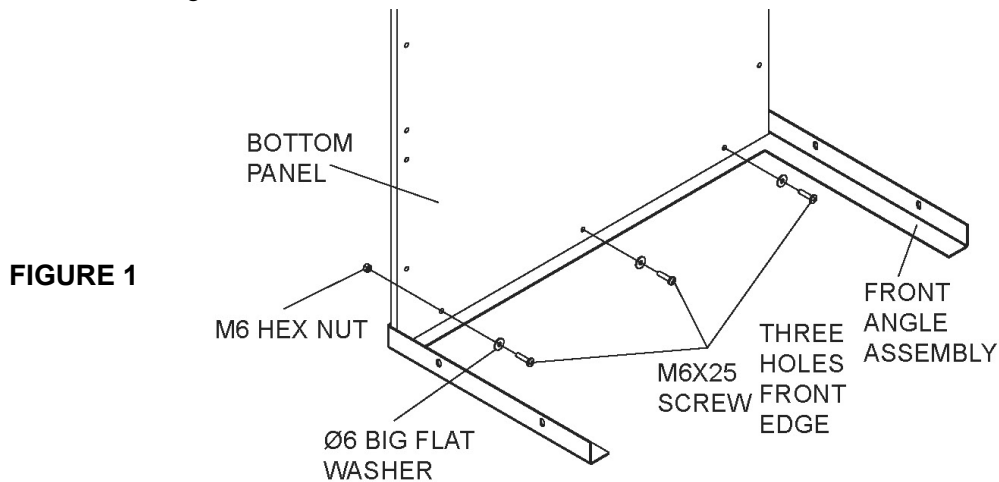

3. Turn the front angle assembly and bottom panel upside down as shown in FIGURE 2.

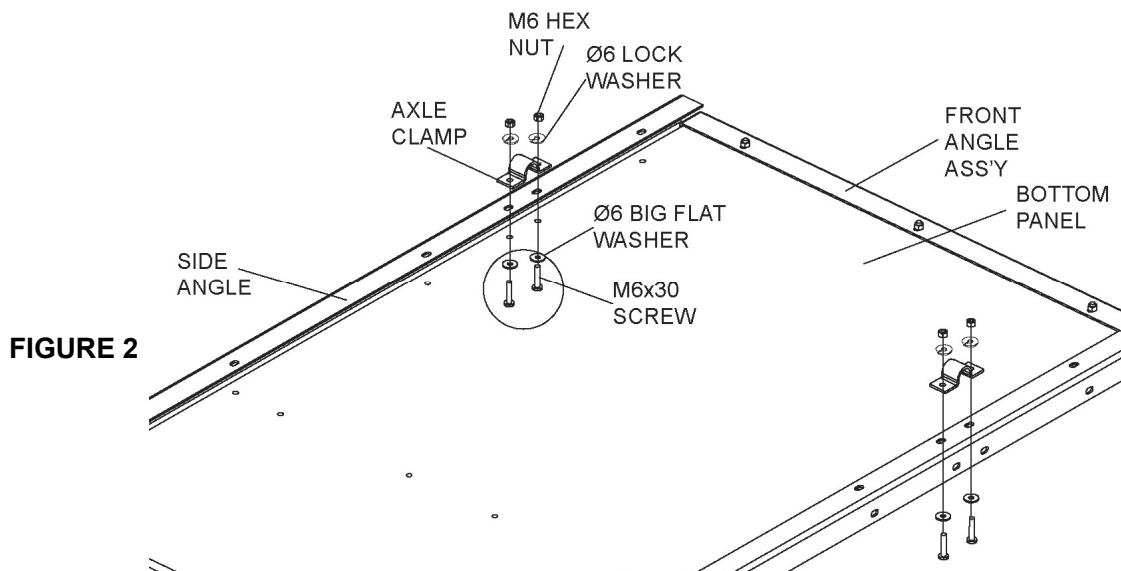

4. Lay the side angles on the bottom panel so that the two holes (for the axle clamp) are close to the front angle assembly. See FIGURE 2
5. Secure the axle clamps to the side angles and the bottom panel using four M6X30 screws, big flat washers, lock washers and hex nuts. Loosely tighten until the axle is assembled. See FIGURE 2.
6. Secure the side angles and bottom panel together with four M6X25 screws, big flat washers and hex nuts using the holes on each side of the axle clamps. Tighten the four nuts. See FIGURE 3.

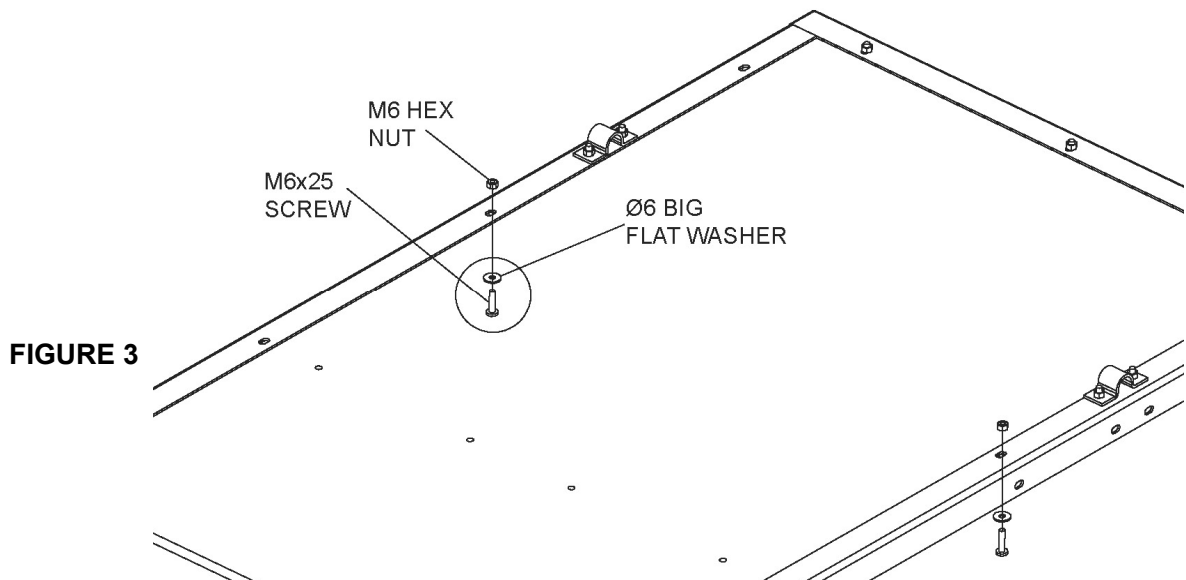


FIGURE 3

7. Stand the cart on end with the angle assembly down on the floor. Temporarily place the four Ø20 flat washers (axle washers) on the inside of front angle assembly. See FIGURE 4.

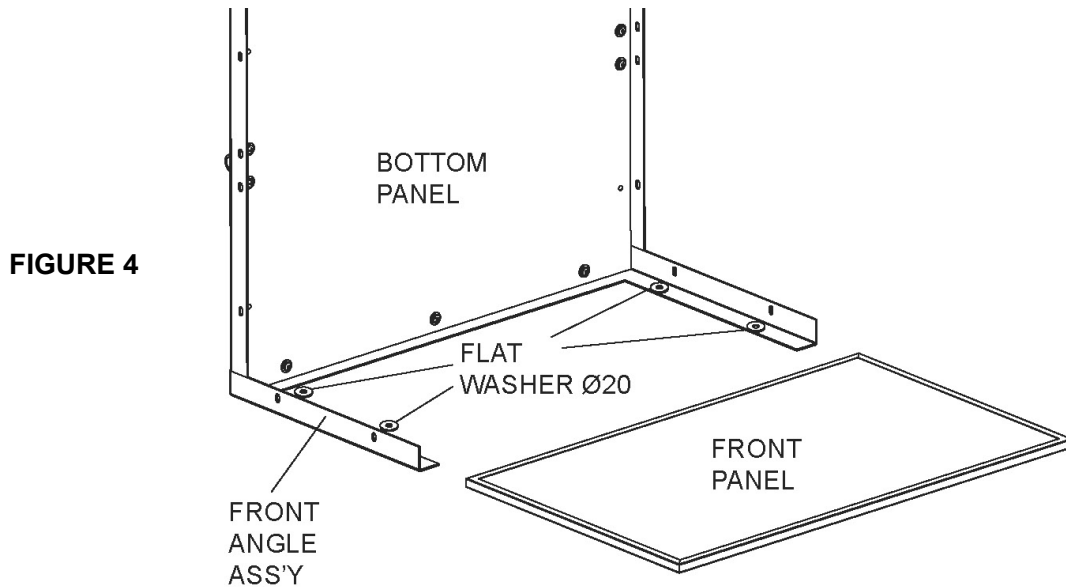


FIGURE 4

Note: Use washers as shims, not for assembly they need to be removed and used on the Axle.

8. Lay the front panel down onto the front angle assembly, on top of the four Ø20 flat washers. See FIGURE 5.


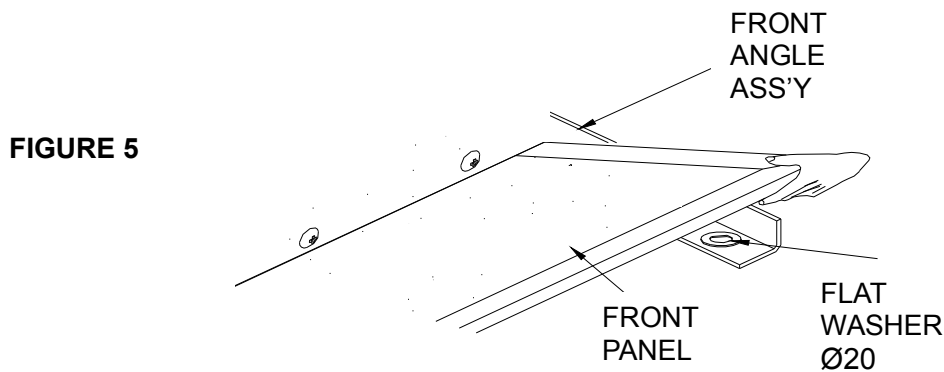



FIGURE 5

9. Position a side panel against a side angle, resting on top of the front panel. Place a support strap on the panel. Place the other end of the support strap on the outside of the side angle and start a M6X25 screw with a big flat washer through the second hole in the side panel, the side angle and the support strap. Secure with a hex nut. Loosely tighten at this time. See FIGURE 6.

10. Put a M6X25 screw with a big flat washer through the top hole in the side panel, the front angle assembly and the support strap. Secure with a hex nut. Loosely tighten at this time. See FIGURE 6.
11. Repeat steps 9 and 10 for the other side panel.

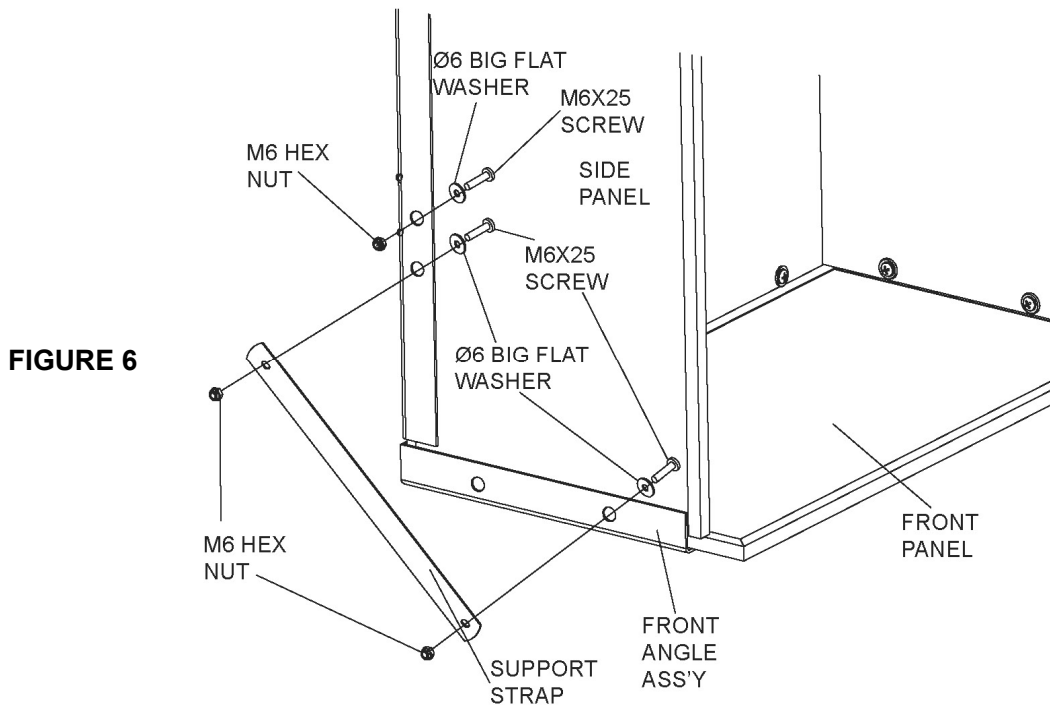


12. Start one M6X25 screw with big flat washer through the bottom hole in the side panel and the front angle assembly. Start another M6X25 screw with big flat washer through the front hole in the side panel and the side angle. Secure with a hex nut, loosely tighten at this time. See FIGURE 7.
13. Repeat step 12 for other side panel.
14. Tighten all loose nuts and screws. See FIGURE 7.

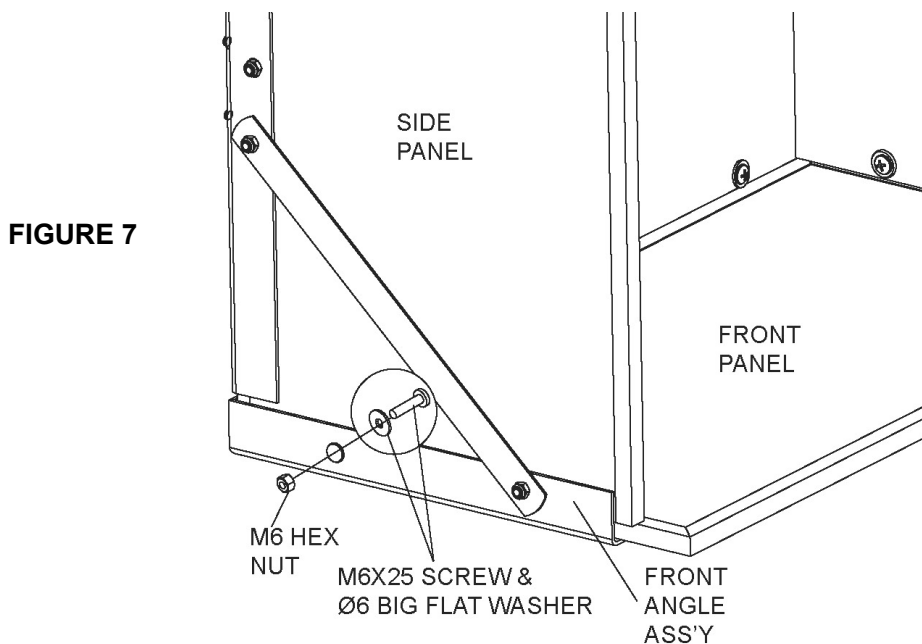


15. Lay the cart box in the upright position. Remove the front panel by sliding it up and remove the four Ø20 flat washers (axle washers) you used for shims. See FIGURE 8.

FIGURE 8

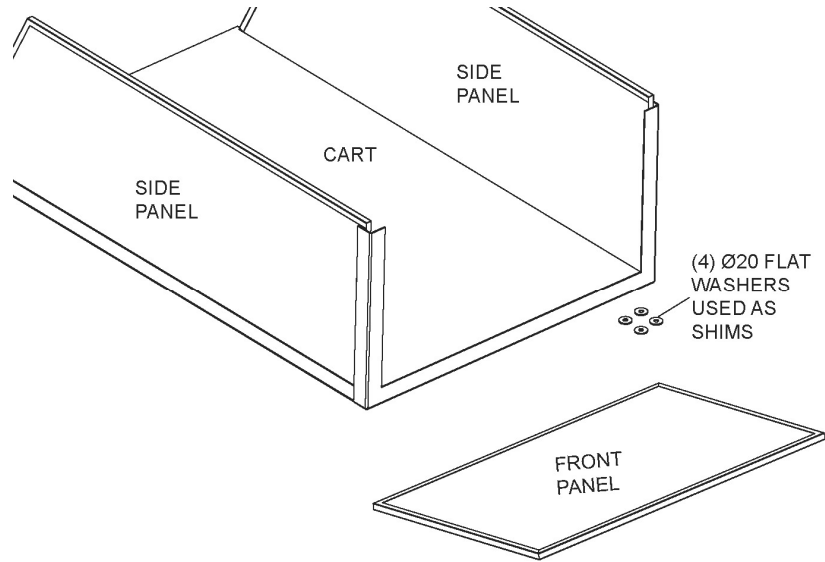


16. Stand cart up on its front end again. Assemble the leg tube, use four M6x50 screws with big flat washers through side panels and leg tube. Secure with hex nuts. See FIGURE 9.

FIGURE 9

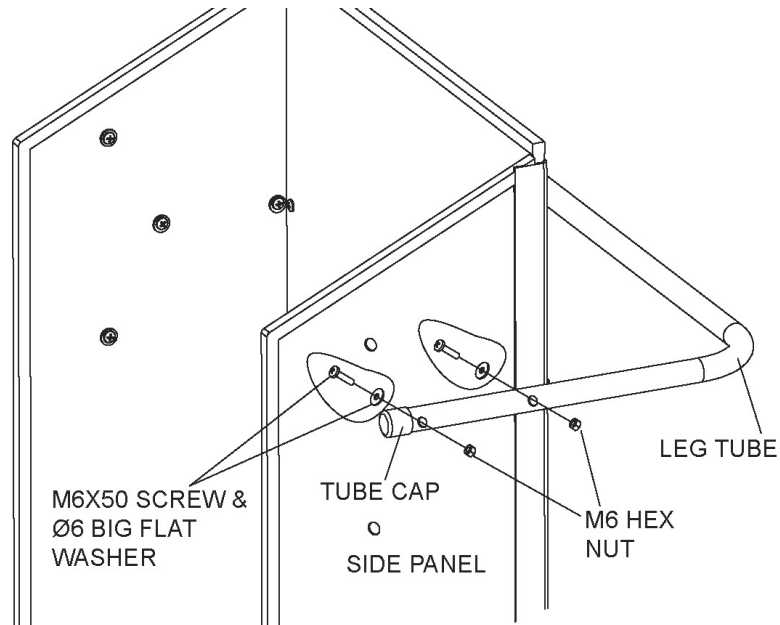


17. Place handle tube over the side panels and line up the four holes. Assemble four M6x50 screws with big flat washers through the side panels and handle. Secure with hex nuts. See FIGURE 10.

FIGURE 10

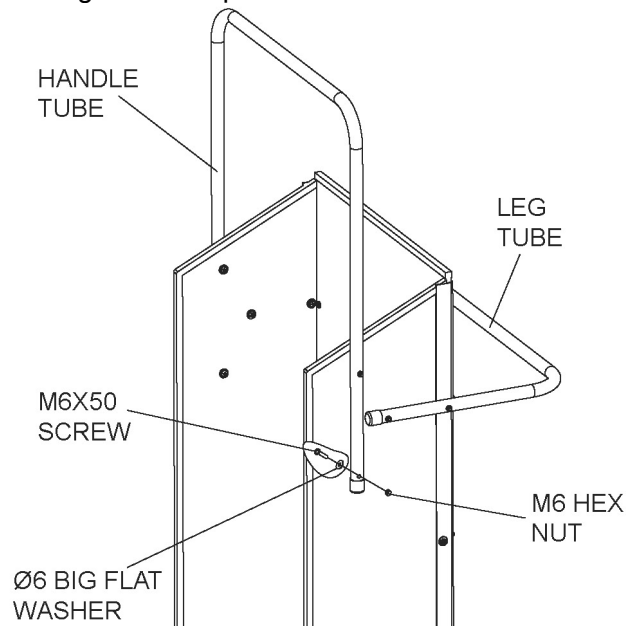

18. Lay the cart upside down. Slide the axle through the axle clamps. See FIGURE 11.


FIGURE 11

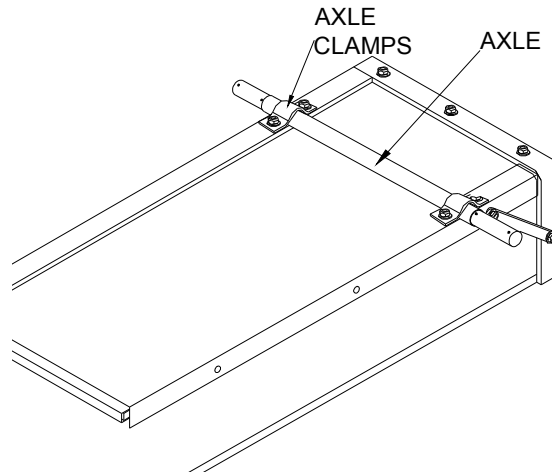

19. Put a cotter pin through the inner hole at one end of the axle. Place a flat washer $\text{Ø}20$ onto the axle. Secure the wheel with a flat washer $\text{Ø}20$ and a cotter pin on the outer hole at the end of the axle. Repeat steps for other wheel on the other side of the axle. See FIGURE 12.

20. Center the wheels and axle on each side of the box and tighten the four nuts on the axle clamps

FIGURE 12

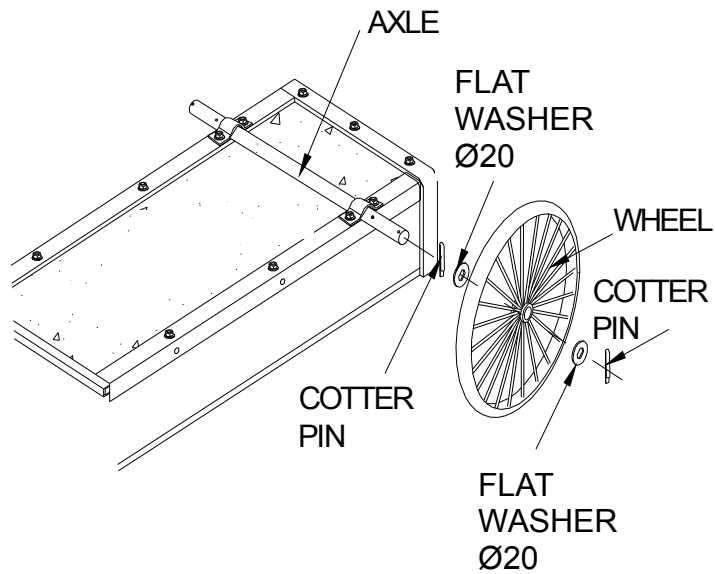

21. Turn cart right side up, so the cart rests on its wheels.

22. Place front panel in guides to complete assembly.

Maintenance and Storage



WARNING

Improper maintenance and storage of the yard cart may void your warranty.

MAINTENANCE

- Before operating grease or oil wheel bearings, use automotive bearing grease or heavy weight oil.
- Periodically tighten all screws to make sure everything is secure before operating.
- Before operating make sure the tires have the RECOMMENDED TIRE PRESSURE 15-20 PSI.
- After each use clean cart thoroughly.
- Annually apply light coat of varnish to all wood surfaces.
- Use a glossy enamel black spray paint to touch up scratched or worn painted metal surfaces.
- Never exceed load capacity rating of 300lbs it will damage the cart.

IMPORTANT:

If a part needs replacement, only use parts that meet the manufacturer's specifications. Replacement parts that do not meet specifications may result in a safety hazard or poor operations.

STORAGE


- Store indoors during severe weather and winter months.

Specifications

Heaping Load Capacity	7 Cubic Ft
Weight Capacity	300lb
Bed Size	42.5" x 24.4"x12.6"
Overall Dimensions	57.3"x33.7"x24.3"
Wheel size	20"X1.75"

The manufacturer reserves the right to make improvements in design and/or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Parts Drawing & Parts List

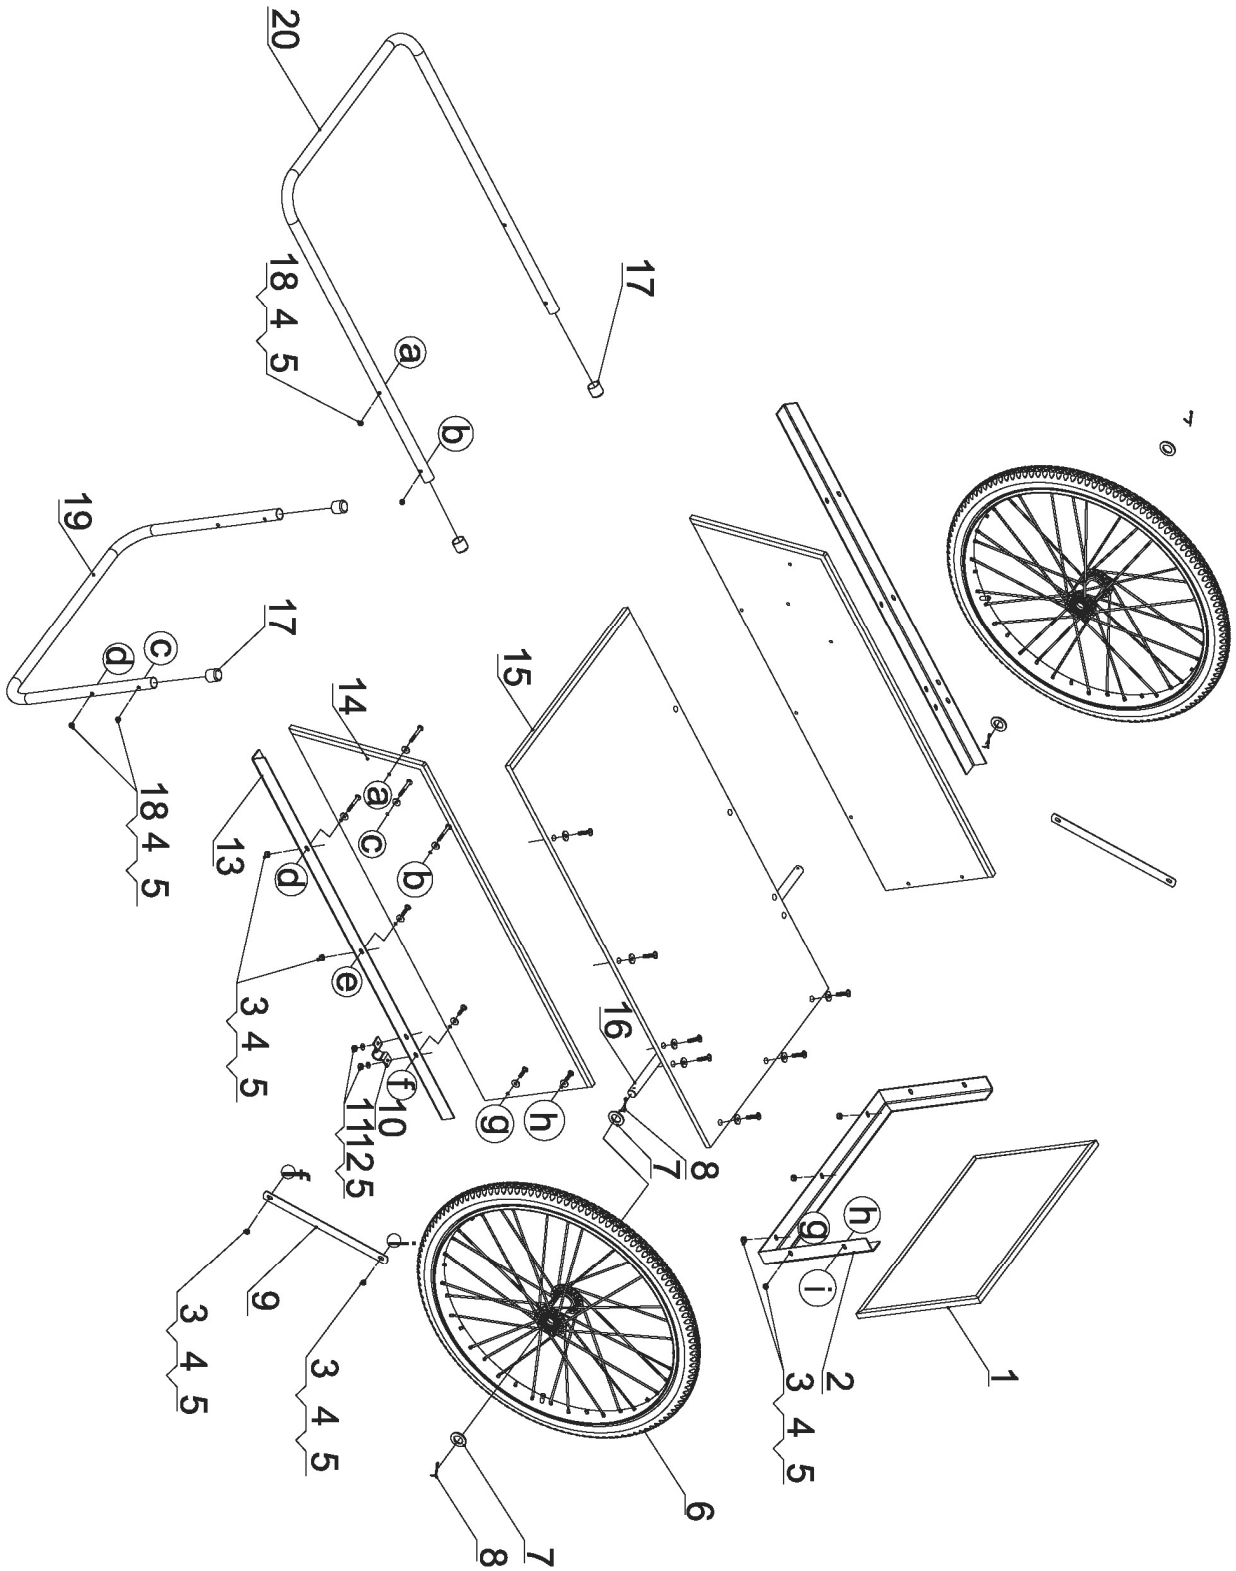

Ref#	Drawing No.	Description	Qty
1	N250-03000	Front Panel	1
2	N250-00004	Front Angle	1
3	9110-06025-DX	M6X25 Screw	15
4	9302-06000-DX	Big Flat Washer Ø6	27
5	9101-06000-DX	Hex Nut M6	27
6	N250-04000	Wheel	2
7	9301-20000-DX	Flat Washer Ø20	4
8	9404-03040-DX	Cotter Pin Ø3x40	4
9	N250-00006	Support Strap	2
10	N240-00009	Axle Clamp	2
11	9110-06030-DX	Screw M6x30	4
12	9306-06000-DX	Lock Washer Ø6	4
13	N250-00005	Side Angle	2
14	N250-02000	Side Panel	2
15	N250-01000	Bottom Panel	1
16	N250-00003-DY	Axle	1
17	N240-00006	Tube Cap	4
18	9110-06050-DX	Screw M6x50	8
19	N250-00002	Leg Tube	1
20	N250-00001	Handle Tube	1

Limited Warranty

Warranty

For one year from the date of purchase YTL International will replace for the original purchaser, or repair the yard cart. The warranty will not apply to any unit which was not assembled correctly, misused, overloaded or which has been used or operated contrary to our instructions, or which has been repaired or altered by anyone other than an authorized representative.

We shall not be liable for any contingent liabilities arising out of the improper function of any parts. We make NO WARRANTY or claims with respect to parts NOT of our manufacture, but we will carry out the terms of the warranties of their respective manufacturers.

Warranty Exclusions

This warranty does not cover cosmetic defects such as paint, decals or wear items such as tires. This warranty will not cover failures or problems due to acts of God, or events or forces beyond the control of the manufacturer.

Normal Wear Exclusion

The yard cart needs periodic service to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment as a whole.

Installation, Use and Maintenance Exclusion

This warranty will not apply to parts and/or labor if the yard cart has been misused, neglected, involved in an accident, abused, loaded beyond its limits, modified or assembled incorrectly. Normal maintenance is not covered under this warranty.

Limits of Implied Warranty and Consequential Damage Exclusion

YTL International disclaims any obligation to cover any loss of time, use of this product, freight, or any incidental or consequential claim by anyone from using this yard cart. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR.

An exchange unit will be subject to the original warranty. The length of the warranty governing the exchanged unit will have the date as the purchase date of the original unit. This warranty gives you certain legal rights which may change from state to state. Your state may also have other rights you may be entitled to that are not listed within this warranty.

Contact Information

YTL International Inc.
17517 Fabrica Way, Suite H
Cerritos, CA 90703
Phone: (888) 723-6534
Phone: (562) 404-8016